



LX0954 T-REX 150 - CARBON FIBER FRAME STIFFENER SET

STEP 1

2 x Standard Kit screw

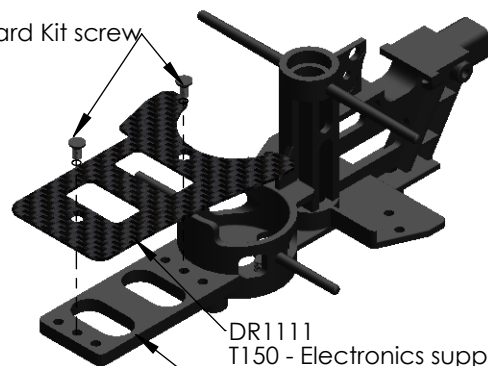


Add CA cyanoacrylate glue
Glue with CA (cyanoacrylate glue type
Loctite 401 - 402 or equiv.)

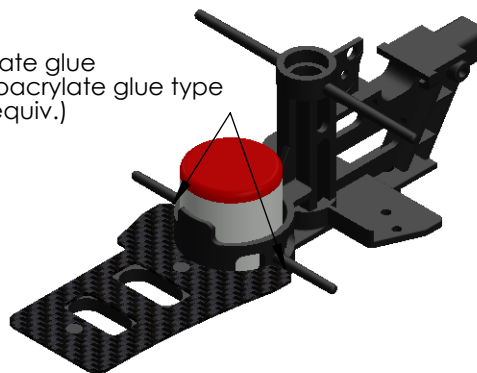

DR1111
T150 - Electronics support stiffener

Add CA cyanoacrylate glue
over all the contact surface
Glue with CA (cyanoacrylate glue type
Loctite 401 - 402 or equiv.)

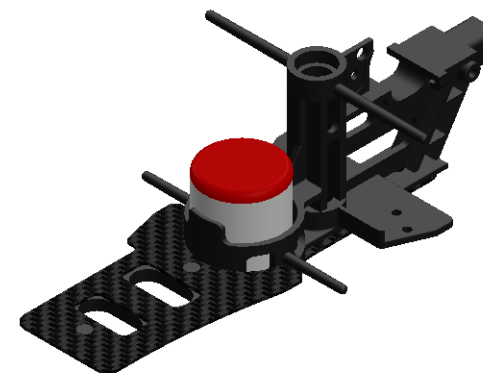

Assembly finish

STEP 2





Use extractor knife to remove the lip shown.
Clean finish with supported sand paper.
Before glue check with frame stiffener
the perfect match.
Glue with CA (cyanoacrylate glue type
Loctite 401 - 402 or equiv.)

STEP 3

DR1110
T150 - Frame stiffener

CA cyanoacrylate glue
Glue with CA (cyanoacrylate glue type
Loctite 401 - 402 or equiv.)

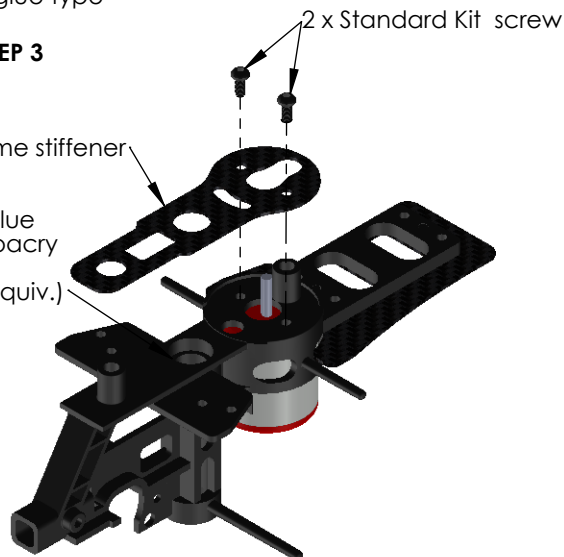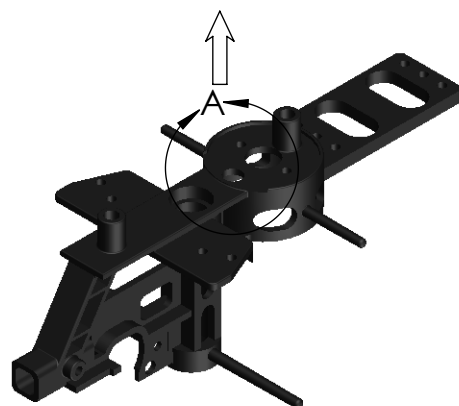

Assembly note